





MILES 9.0/12.0 INSTALLATION INSTRUCTIONS | MAY 2023

2 1 3 03 013 5 light source

DISMOUNTING AND RECYCLING INSTRUCTIONS Light source Pull off the cover. 2 Remove the luminaire from the backplate by unscrewing the screws on the side. (3) Loosen the backplate from the wall by removing the screws and loosen the wires. (4 Unscrew the endcaps on both sides and pull out the diffuser. 5 Loosen the wires to remove the light source(s). The light source is replaceable by an authorized professional. For advice contact your Wever & Ducré customer service contact point.

A ↑ G

This luminaire contains a light source with the energy class D.

WEVER & DUCRÉ

2