



DISMOUNTING AND RECYCLING INSTRUCTIONS Light source & driver

1 Loosen the socket screws from the fixture to remove it from the mounting base.

- Unscrew the screws, disconnect the wires and remove the driver.
- Pull out the diffusers using any available tools.

Unscrew the screws, disconnect the wires and remove the light sources.

The driver can be replaced by the end user.



The light source is replaceable by an authorized professional. For advice contact your Wever & Ducré customer service contact point.

This luminaire contains a light source with the energy class D.

2